


triton 1/2" Precision Router SPARE PARTS LISTING

MOF001

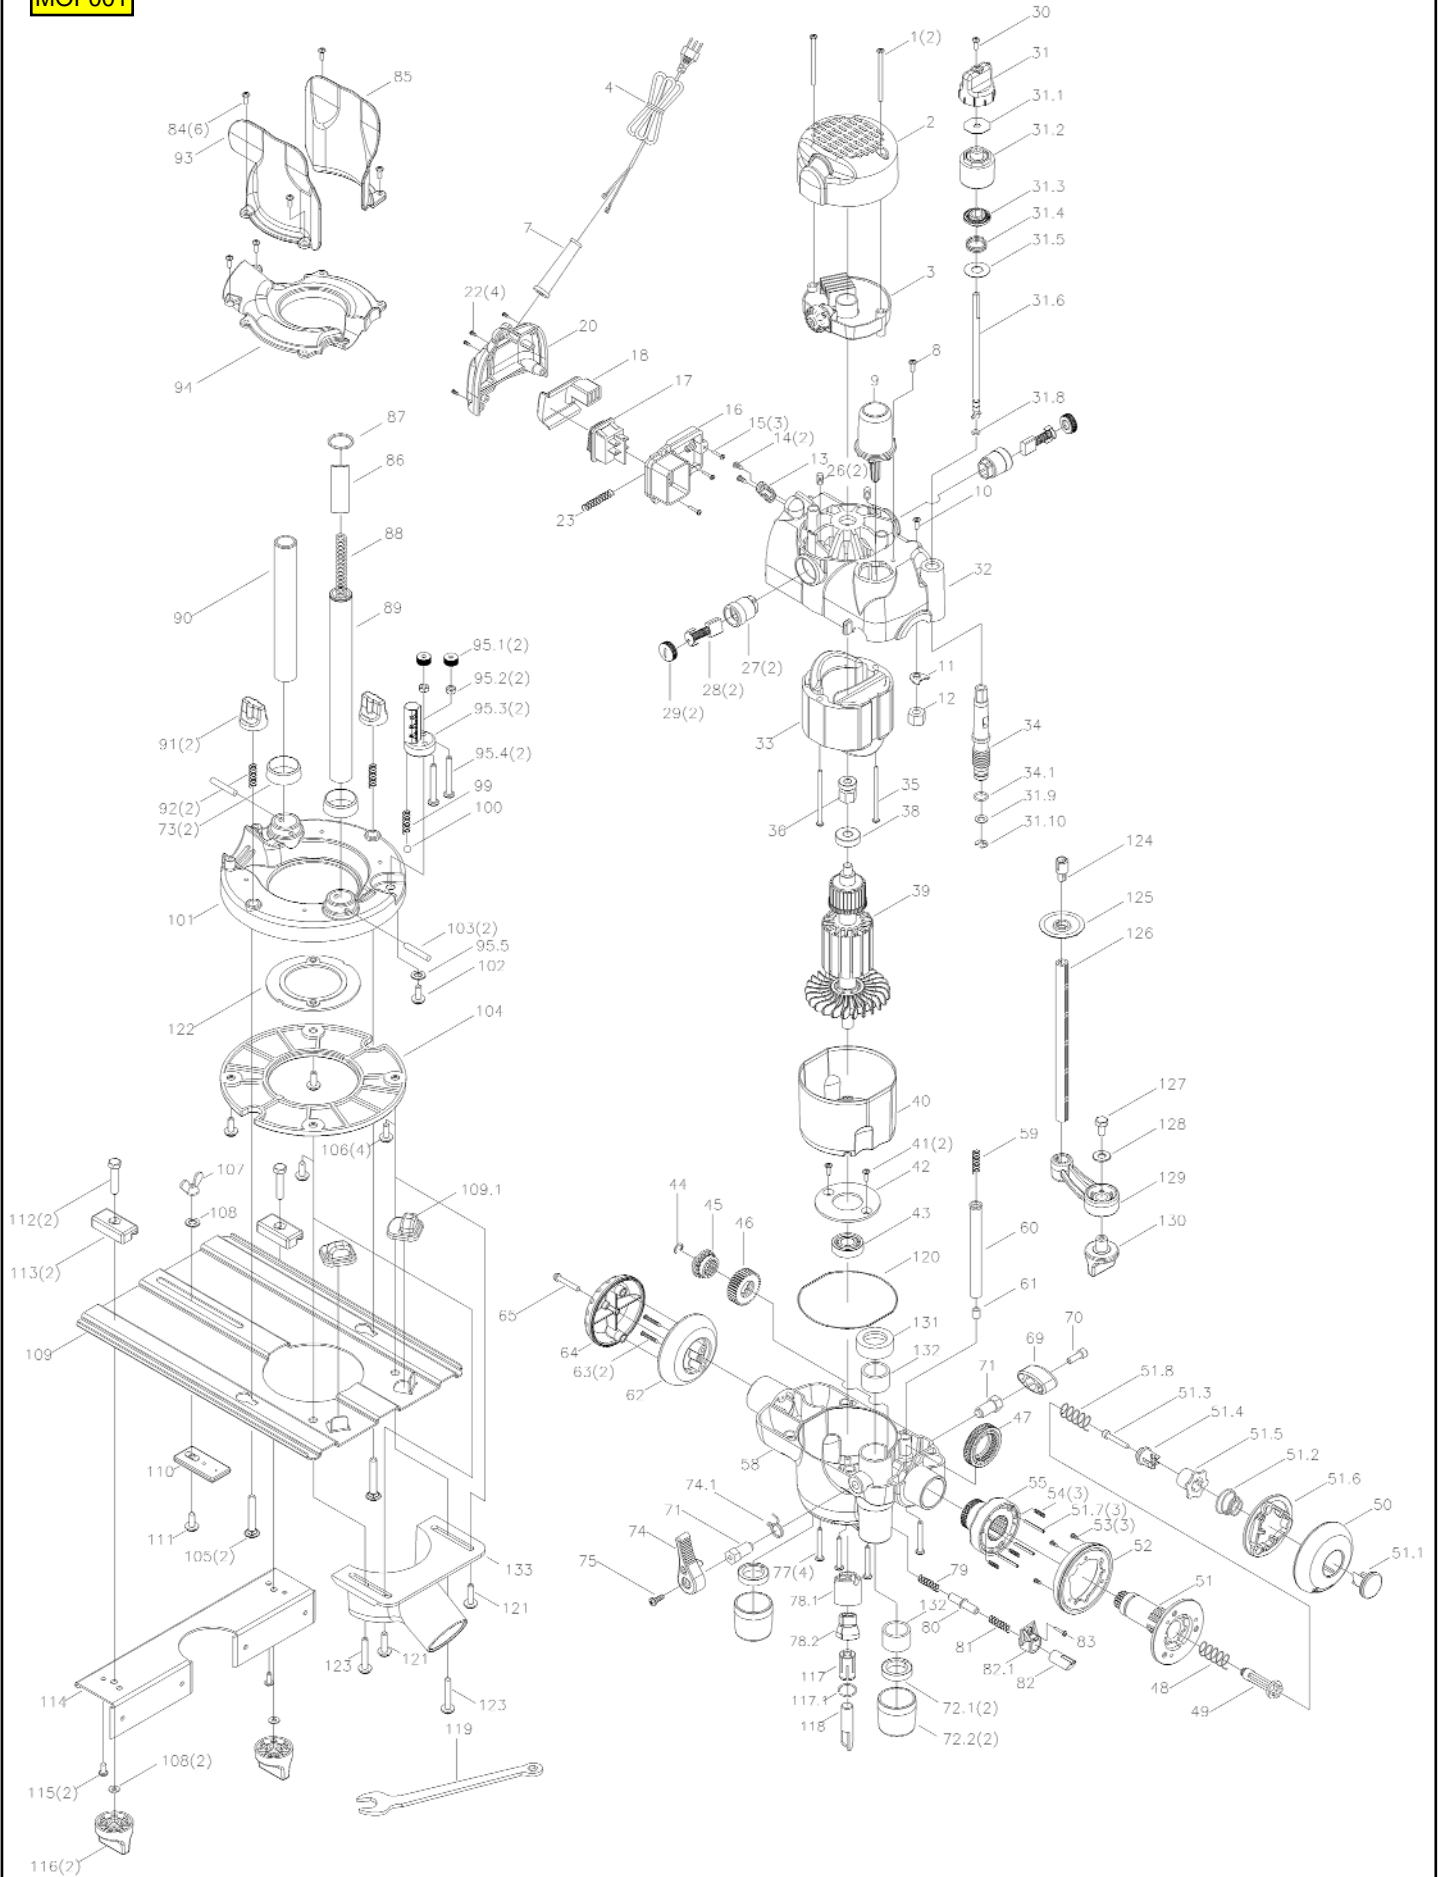

Ref.	Part No.	Description	Ref.	Part No.	Description
1	TRA 307	Screw, Motor Cover	65	TRA 094	Screw, Fixed Handle Outer
2	TRA 306	Motor Top Cover	69	TRA 348	Knob, Depth Stop
3	TRA 386	Speed Controller, 230-240V	70	TRA 349	Screw Depth Stop Knob, M5 X 15 Socket Head Cap
4	TRA 380	Plug And Cord, AUS	71	TRA 049	Bolt, Plunge Lock
7	TRA 018	Cord Relief	72.1	TRA 367	Post Dust Seal Strip
8	TRA 070	Screw, Rack Post Cap	72.2	TRA 368	Post Dust Seal Cap
9	TRA 342	Cap, Rack Post	73	TRA 366	Post Base Cap
10	TRA 408	Micro Adjust Drag Plate M4 X 35 Socket Head Cap Screw	74	TRA 362	Plunge Lock Lever
11	TRA 407	Micro Adjust drag Plate	74.1	TRA 363	Spring, Plunge lock Lever
12	TRA 409	Micro Adjust Drag Plate M4 Nylon Nut	75	TRA 099	Screw, Plunge Lock Bolt
13	TRA 017	Cord Restrain	77	TRA 101	Screw, Motor Body
14	TRA 072	Screw, Cord Restrain	78.1		Chuck Body
15	TRA 073	Screw, Switch Mount	78.2	TRA 013	1/2" Split Collet Chuck
16	TRA 352	Switch Mount	79	TRA 104	Spring, Shaft Lock, Inner
17	TRA 054	Switch, Marquardt 230-240V	80	TRA 026	Pin, Shaft Lock
18	TRA 354	Slide Cover	81	TRA 105	Spring, Shaft Lock, Outer
20	TRA 308	Switch Cover	82	TRA 025	Button, Shaft Lock
22	TRA 075	Screw, Switch Cover, Long	82.1	TRA 364	Nose, Shaft Lock
23	TRA 355	Spring, Switch Cover	83	TRA 365	Screw, Shaft Lock Nose
26	TRA 079	Screw, Brush holder	84	TRA 107	Screw, Chip Shield
27	TRA 387	Brush Holder	85	TRA 336	Chip Shield Turret Side
28	TRA 389	Brush	86	TRA 327	Liner, Rack Post
29	TRA 388	Brush Holder Cap	87	TRA 325	Snap Ring, Rack Post 20mm
30	TRA 375	Screw, Micro Adjust Knob M3 X 20 pan Head	88	TRA 344	Spring, Rack Post
31	TRA 373	Micro Adjust Knob Upper	89	TRA 324	Rack Post
31.1	TRA 404	Micro Adjust Torque Plate	90	TRA 326	Smooth Post
31.2	TRA 372	Micro Adjust Knob Lower	91	TRA 064	Knob, Fence Attachment
31.3	TRA 374	Micro Adjust Clutch	92	TRA 111	Spring, Fence Attachment Knob
31.4	TRA 379	Spring, Micro Adjust Clutch	93	TRA 334	Chip Shield Vacuum Side
31.5	TRA 377	Micro Clutch Hex Washer	94	TRA 332	Vacuum Shield
31.6	TRA 401	Micro Adjust Universal Shaft	95.1	TRA 030	Turret Wheel
31.8	TRA 405	Universal Shaft O Ring 4mm ID By 0.55mm DIA	95.2	TRA 112	Nut, Turret Wheel, M5
31.9	TRA 403	Micro Adjust universal Shaft Washer	95.3	TRA 028	Turret
31.10	TRA 402	Micro Adjust 4mm E Clip	95.4	TRA 113	Screw, Turret Wheel, M5 Long Panhead
32	TRA 304	Upper Motor Body	95.5		Washer, Turret Pivot
33	TRA 384	Field, 230-240V	99	TRA 114	Spring, Turret Detent
34	TRA 378	Worm Gear, 2mm and "	100	TRA 029	Ball, Turret Detent
34.1	TRA 406	Worm Gear O ring 9.6mm ID By 1.2mm DIA	101	TRA 322	Base
35	TRA 305	Screw, Field	102	TRA 115	Screw, Turret Pivot, M4 X 15 Panhead
36	TRA 027	Magnet Ring And Mount Assembly	103	TRA 323	Roll Pin, Posts
38	TRA 381	Bearing, Armature Upper	104	TRA 328	Base Plate
39	TRA 382	Armature, 230-240V	105	TRA 117	Coach Bolt, Fence Attachment
40	TRA 303	Fan Shroud	106	TRA 118	Base Plate Screws 1/2"-20UNC X "
41	TRA 086	Screw, Lower Armature Bearing Plate	107	TRA 119	Wing Nut, Circle Cutter
42	TRA 015	Plate, Lower Armature Bearing	108	TRA 120	Washer, Circle Cutter
43	TRA 014	Bearing, Armature Lower	109	TRA 059	Fence Plate
44	TRA 087	E Ring, Plunge Handle	109.1	TRA 319	Fence Adaptor
45	TRA 154	Plunge Handle Clutch	110	TRA 063	Circle Cutter Pivot
46	TRA 153	Plunge Handle Pinion	111	TRA 121	Bolt, Circle Cutter
47	TRA 376	Worm Wheel, 2mm and "	112	TRA 122	Bolt, Fence Slide Clamp
48	TRA 152	Spring, Clutch Shaft Outer	113	TRA 061	Fence Slide Clamp
49	TRA 150	Plunge Handle Clutch Shaft	114	TRA 060	Fence Slide Face
50	TRA 139	Plunge Handle Outer Rubberised	115	TRA 123	Screw, Fence Slide Clamp
51	TRA 147	Plunge Handle Shaft	116	TRA 062	Knob, Fence Slide Clamp
51.1	TRA 141	Plunge Select Push Button	117	TRA 129	1/2" to 1/2" Reducing Sleeve
51.2	TRA 142	Plunge Select Button Spring	117.1		Reducing Sleeve Ring
51.3	TRA 143	Plunge Select Button Screw	118	TRA 124	Router Bit. 1/2 Inch
51.4	TRA 144	Plunge Handle Rotor	119	TRA 066	Spanner, 22mm
51.5	TRA 145	Plunge Handle Stator	120	TRA 357	O Ring Body Seal
51.6	TRA 146	Plunge Handle Lockout	121	TRA 391	Base Plate Screws 1/2"-20UNC X " Chip Shield Base
51.7	TRA 149	Plunge Handle Roll Pin X "	122	TRA 359	Guide Bush Plate
51.8	TRA 151	Spring, Clutch Shaft Inner	123	TRA 392	Base Plate Screws 1/2"-20UNC X 1" Chip Shield Fence
52	TRA 140	Plunge Handle Inner	124	TRA 411	Micro Height Universal
53	TRA 089	Screw, Plunge Handle	125	TRA 417	Micro Height Position Indicator
54	TRA 090	Spring, Release Ring	126	TRA 412	Micro Height Drive Tube
55	TRA 148	Micro Release Ring	127	TRA 415	Screw, Micro Height
58	TRA 302	Lower Motor Body	128	TRA 414	Washer, Micro Height
59	TRA 347	Spring, Depth Stop	129	TRA 416	Micro Height Crank Arm
60	TRA 346	Tube, Depth Stop	130	TRA 413	Micro Height Adjuster Knob
61	TRA 058	Plug, Depth Stop Tube	131	TRA 301	Rack Post Ring
62	TRA 138	Fixed Handle Inner	132	TRA 309	Bush, Rack Post
63	TRA 093	Screw, Fixed Handle Inner	133	TRA 330	Chip Collector
64	TRA 137	Fixed Handle Outer Rubberised			