


Classic Knob Installation Instructions

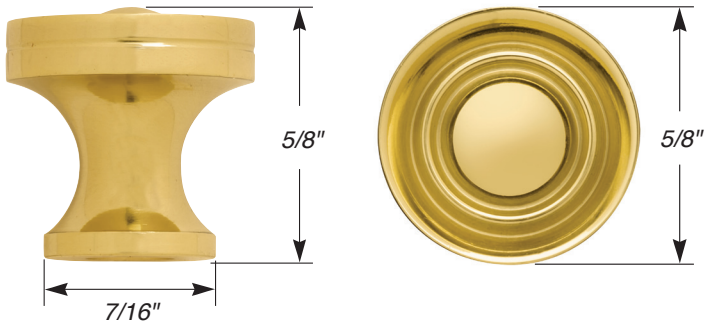

1. Drill a 3/16" clearance hole for the mounting screw at the desired location on the door or drawer.
2. Insert the included mounting screw in the hole from the inside of the door or drawer and thread on the knob.

35451
Rev 01/14



Visit Rockler.com for the most current product information and videos or call 1-800-260-9663.

 **ROCKLER**[®]
WOODWORKING AND HARDWARE

Create with Confidence™

© Rockler Companies Inc. 2014