


# Cane Hardware Set

## Instructions

1. Determine desired length of cane. Divide wood length into two equal parts.
2. Turn wood pieces with taper as indicated. (Note: Wood can be turned in one piece and then cut in half or it can be turned in two pieces, as shorter pieces are easier to turn).
3. Drill holes for center joint as indicated.
4. Position a small piece of waxpaper between brass pieces for center joint (this will make it easier to take apart once installation is complete). Thread in by hand as far as possible, then use both halves turning against each other to complete seating of brass fittings.
5. Use handle attached to top fitting to thread on to wood.
6. Install protective brass tip on bottom by affixing it with several drops of epoxy glue.

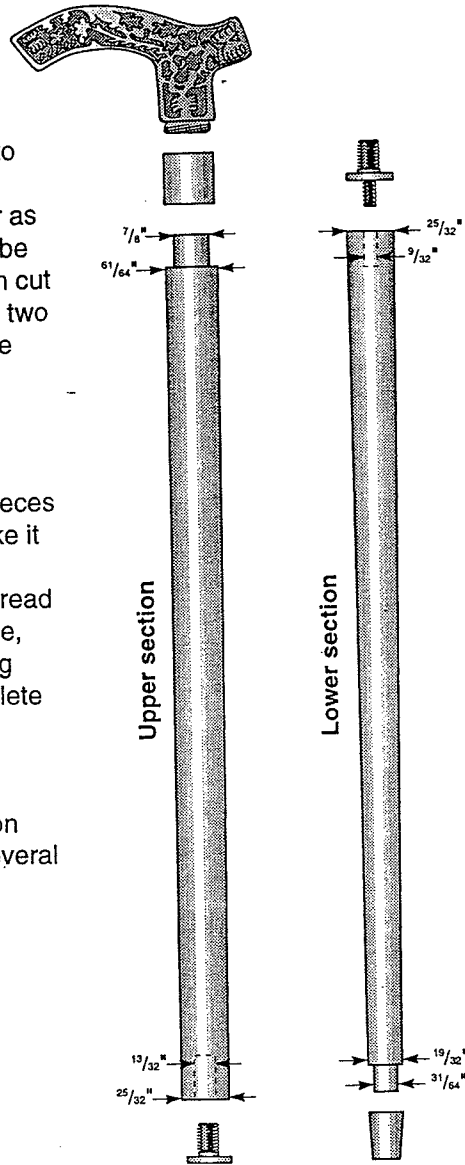

51056