

How to measure your doors and drawer fronts:



Door Width



Door Height



Drawer Width




Drawer Height

A. Pick your hinges first: This will determine what size overlay is needed.

B. Measuring opening size: (Do not order by these opening size dimensions.) Measure all door openings, round down to the nearest 1/16".

Always write width first.

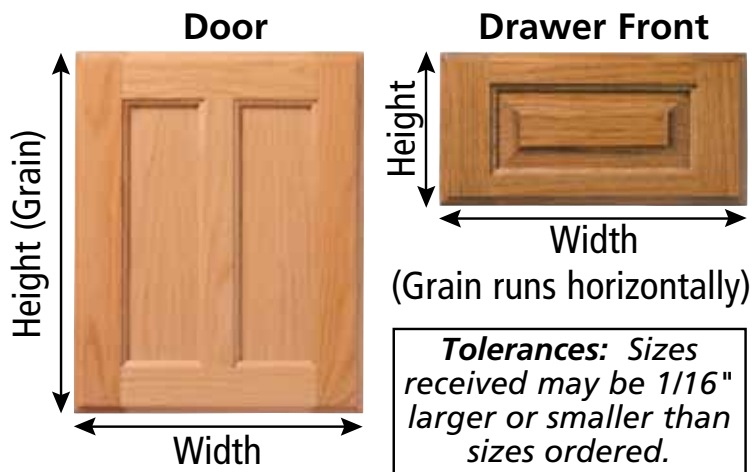

C. Figuring order sizes:

For 1/2" overlay add 1" to the width and 1" to the height of each opening size. If your application requires a different overlay, adjust the measurements accordingly. For inset applications, subtract no less than 1/4" on both width and height of cabinet opening measurements. Doors and drawer fronts will be custom-made to the sizes you specify, so measure carefully. Standard drawer wood grain runs horizontally.

- Order two doors to cover any opening more than 22" wide.

Doors over 26" in width and/or 48" to 50" in height may have double panels.

- **Minimum Size Information:** If you use a minimum size you must add 4" to the other dimension.

- We guarantee no warping or cracking on doors sized up to 23" wide and/or 46" high; drawer fronts up to 30" wide and/or 12" high.

Doors over 50" require an additional \$75 charge per order.

Please check measurements carefully – accuracy is essential!

25% restocking charge on custom orders. Minimum charge per drawer is 216 square inches.