


SAFETY BRACKETS FOR BUNK BED FRAME ASSEMBLY

53724


Bracket installation:

1. Rout the position for the post bracket on each post.
2. Position the post bracket with the keyhole slot at the top on each bed post and secure it's location with (6) #6 x 1" flat head screws.
3. Position a hooked rail bracket on each end of the rails and securely attach using (3) #6 x 1" flat head screws and (1) #6 x 1" button head Safety Screw in the "Safety Screw" hole on each bracket.

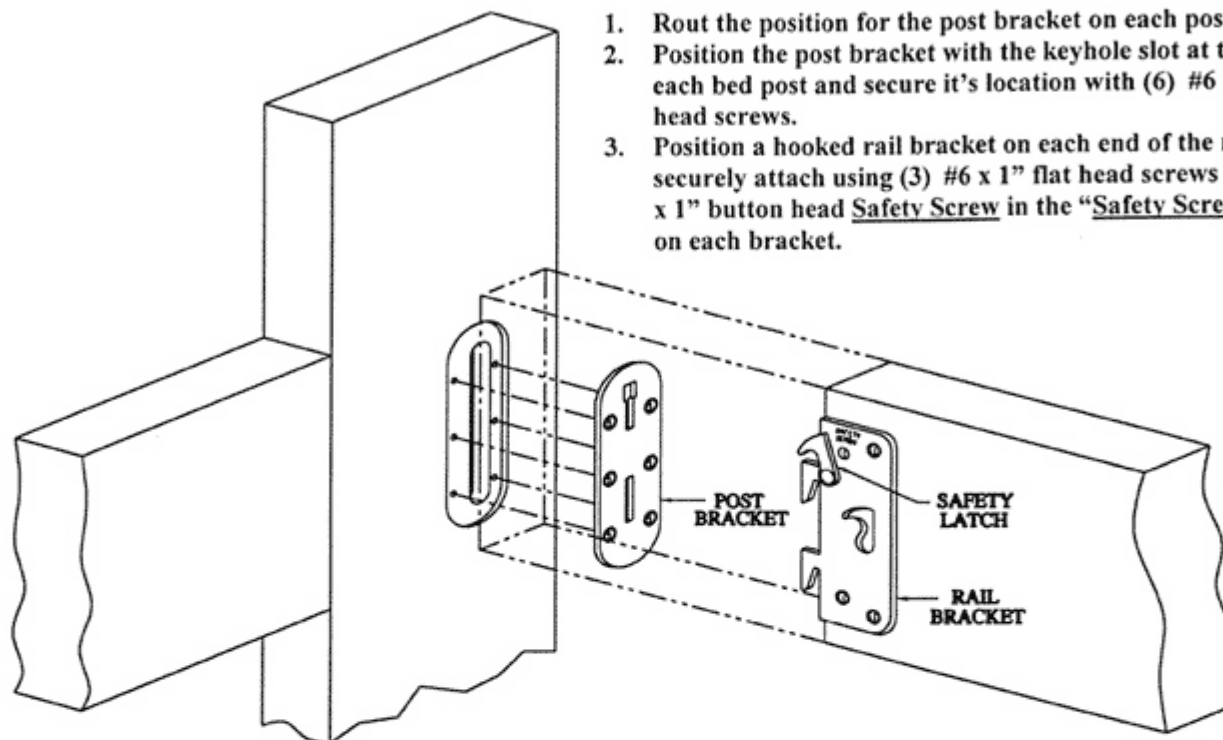

Bed Frame Assembly:

1. Remove the Safety Screws from the (4) rail brackets.
2. Assemble the rails to the headboard and the footboard by aligning and inserting the hooks into the slots in the post brackets.
3. Seat the hooks securely in the post brackets by applying downward force on each corner of the rails.
4. Rotate the Safety Latches on each corner until they are firmly seated in the keyhole opening of the bed post bracket.
5. Re-install all four Safety Screws into their marked holes behind each Safety Latch.

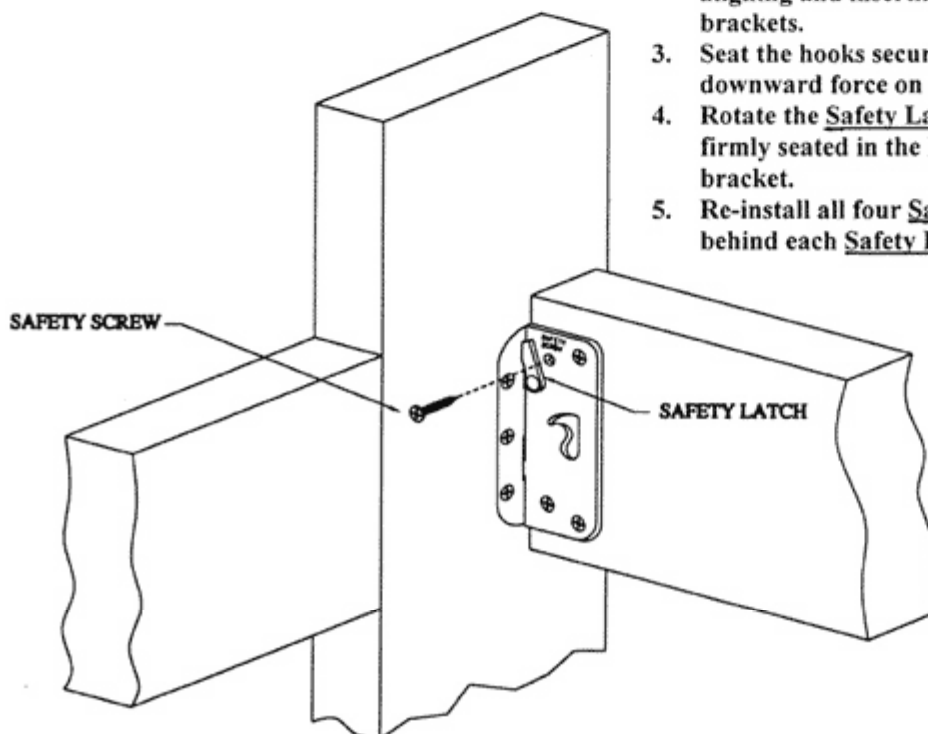

RTD10000242AA

LL020 101101 DRK