



Concealed Hinge Router Jig-It (33234)

Instructions:

1. Mount bar to template for either 3mm or 5mm tabs.
2. Using screws provided with hinge, attach jig to door.
3. Rout a 35mm hole using a 5/8" guide bushing and a 1/2" spiral bit.
4. Remove jig and attach hinge.

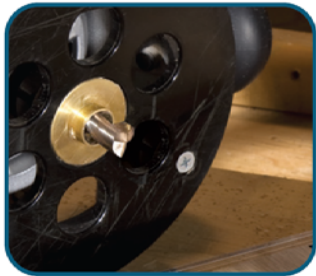

Requires a 5/8" guide bushing (#38756) and a 1/2" spiral bit (#63008).

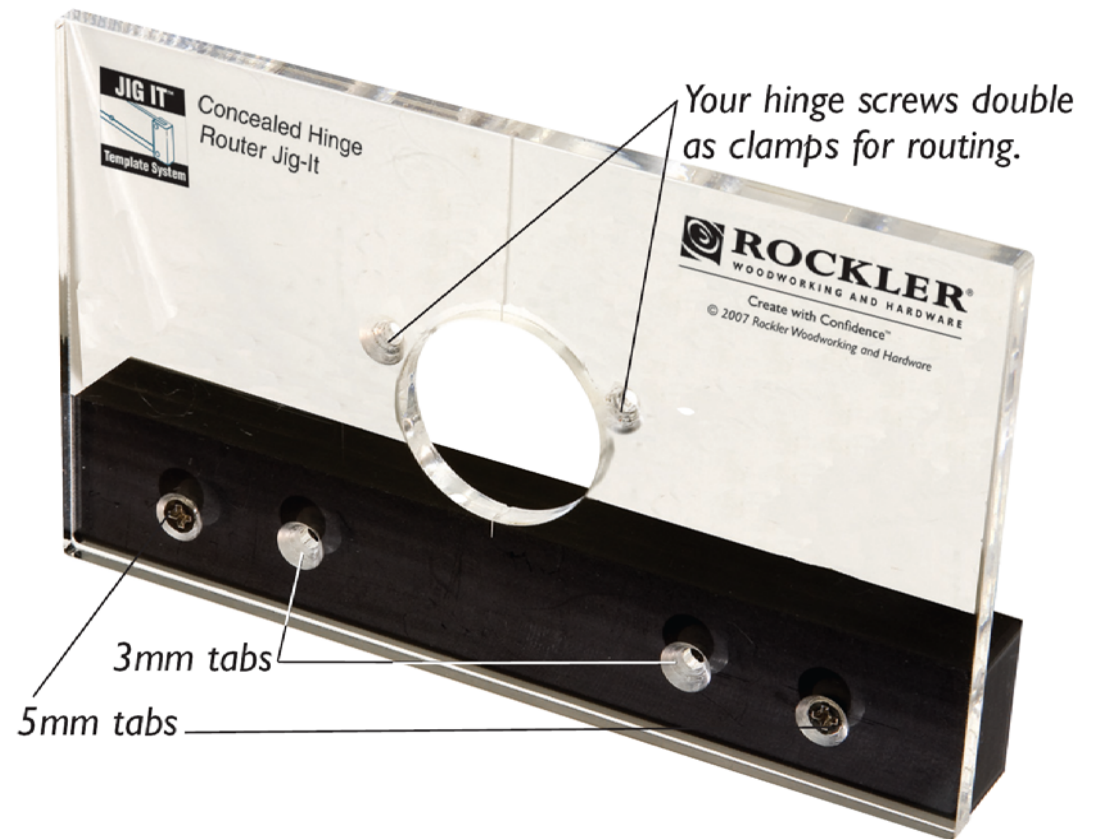

ROCKLER[®]
WOODWORKING AND HARDWARE

Create with Confidence™

Made in U.S.A.
Distributed by Rockler Companies, Inc.
© 2007 Rockler Woodworking and Hardware

RTD10000408AA